

Typical Installation

## Applicable Models

- 14RESA/L
- 14RCA/L
- 20RESA/L
- 20RESB
- 20RESC/L
- 20RESD
- 20RCA/L
- 26RCA/L

## Description

The breather tube and oil heater kit is recommended for improved cold starting in locations where the ambient temperature drops below 0°C (32°F).

The breather tube heater wraps around the crankcase breather tube below the air cleaner. The oil heater is inserted into the oil drain port and includes a port for the oil drain valve. The oil heater power cord connects to the breather tube heater.

Breather tube and oil heater kits are available in 120-volt versions. Kits for 14 and 20 kW models include a 3-way extension cord to allow connection of multiple AC accessories. The heaters for the 26RCA/L connect to the generator set engine harness.

**Note:** The heaters require a continuous source of AC power that is backed up by the generator set.

## Generator Models and Kits

Kit Number	Generator Models
GM110949-KP1-QS	14RESA/RESAL/RCA/RCAL
GM110949-KP2-QS	20RESA/AL/B/C/CL/D/RCA/RCAL
GM110949-KP3-QS	26RCA/L


## Oil Heater Specifications (all kits)

Voltage	120 VAC
Watts	60 W
Thermostat ON	4°C (40°F)
Thermostat OFF	13°C (55°F)

## Breather Tube Heater Specifications

Kit Number	GM110949-KP1-QS	GM110949-KP2-QS	GM110949-KP3-QS *
Voltage	120 VAC	120 VAC	120 VAC
Watts	5 W	10.4 W	5.8 W
Thermostat ON	4°C (40°F)	4°C (40°F)	4°C (40°F)
Thermostat OFF	13°C (55°F)	13°C (55°F)	13°C (55°F)

\* The 26RCA breather tube heater may be factory-installed on the breather hose.

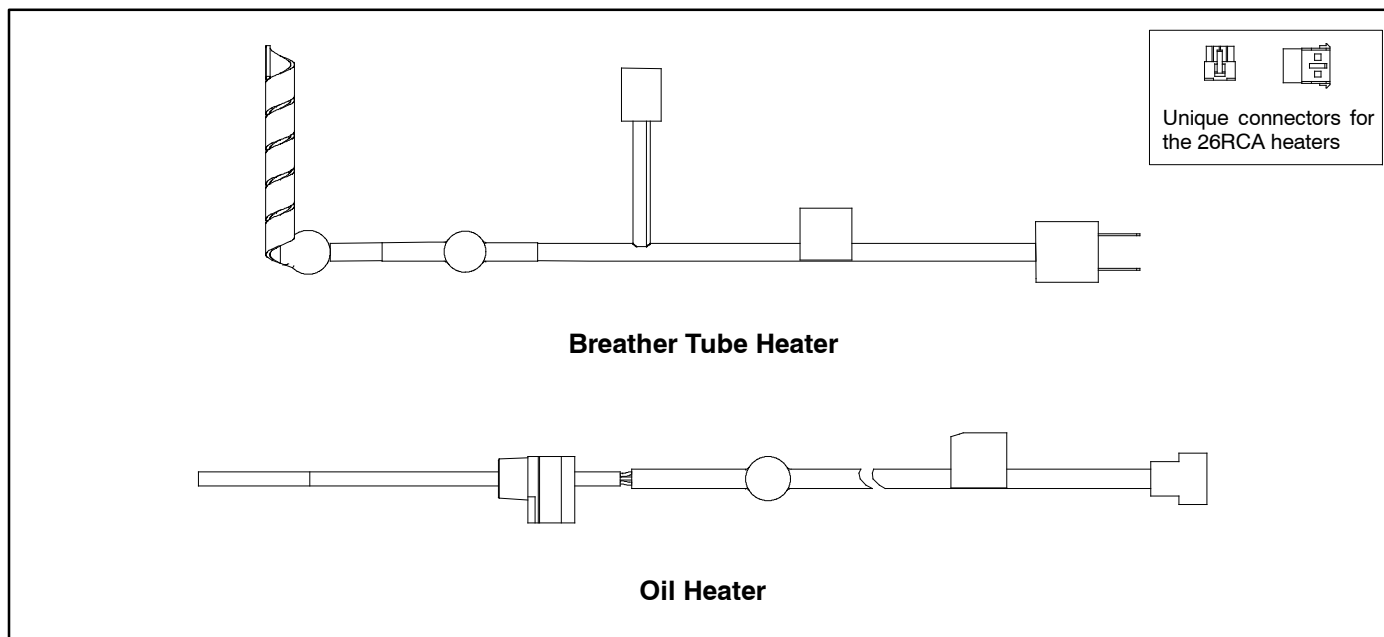

**DISTRIBUTED BY:**

Availability is subject to change without notice. Kohler Co. reserves the right to change the design or specifications without notice and without any obligation or liability whatsoever. Contact your local Kohler® generator distributor for availability.

© 2016 Kohler Co. All rights reserved.